


# STEELWAY Cellar Doors

290 E. Church Road  
(610) 277-9988

King of Prussia, PA 19406  
(610) 277-1440 FAX

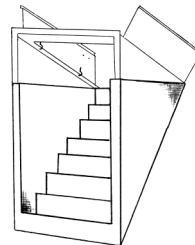

## Site Prep Sheet

**VERY IMPORTANT**

- Clear access for boom truck (101" wide, even surface)
- The width of the hole must be no more than 41" for poured walls and 40" for block walls
- Hole excavated 8' wide down from the footer, back from the footer 48" then graded up at a 45° angle
- Hold back any foundation coating 12" from the hole on all sides
- If the wall is block, the last three cores on each side of the opening must be filled with concrete – *not mortar*
- If you pour the slab prior to setting the stairs make sure there is no 'over pour' out the opening and no wood in the doorway
- If you have a poured wall and you have the opportunity, pour 12" high across the opening **IN THE SAME POUR AS THE WALLS**. This leaves no cold joints and after the slab is poured, this becomes your first step. This may also enable you to use a smaller unit
- The outside surface of the wall must be smooth and plumb.

### Things that will void the waterproof guarantee:

Block walls that don't have filled cores  
Floor slabs not poured prior to setting the stairs  
Floor slabs poured too short or out the doorway

### Things that cost extra:

Return trip fee if the site is not ready  
Digging fee if the site is not dug out properly  
Replacement fees if the wrong size unit was ordered

**VERY IMPORTANT**

